

## Installation and Maintenance Instruction Manual



### Switches 700 Series:

### Pressure switch model B7, differential pressure switch model D7 and temperature switch model T7

for explosion risk areas pursuant to Directive 2014/34/EU (ATEX)

In the following configuration:

- B7###CEN6 or CEN7### pressure switch
- D7###CEN6 or CEN7### differential pressure switch
- T7###CEN6 or CEN7### temperature switch



**B7**

**Pressure switch**



**T7**

**Temperature switch**

**D7**  
**Differential pressure  
switch**

**Table of contents:**

1	General remarks.....	4
1.1	Purpose of this Manual.....	4
1.2	Symbols.....	4
1.3	Limits of liability.....	4
1.4	Copyright.....	4
1.5	Warranty.....	4
1.6	Manufacturer's address, customer services.....	4
2	Safety.....	4
2.1	General sources of hazards.....	4
2.2	Operator's responsibility.....	5
2.3	Staff qualifications (target group assessment).....	5
2.4	Signs/Safety markings.....	5
2.5	Safety equipment.....	5
2.6	Environmental protection.....	5
3	Use in explosion risk areas pursuant to Directive 2014/34/EU (ATEX).....	6
3.1	Switch 700 Series: B7/D7/T7 intrinsically safe.....	6
4	Technical data.....	6
5	Labeling on the device.....	7
5.1	Labeling on the device for explosion risk areas (ATEX).....	7
6	Construction and function.....	7
6.1	Overview.....	7
6.2	Description of function.....	7
6.3	Description of components.....	7
6.4	Accessories.....	8
7	Transport.....	8
7.1	Safety.....	8
7.2	Transport inspection.....	8
7.3	Storage.....	9
8	Assembly/Installation.....	9
8.1	Safety.....	9
8.2	Preparations (requirements for the installation location).....	9
8.3	Mounting/Installation.....	9
8.4	Starting up and setpoint adjustment.....	11
8.5	Subsequent relocation of the switch (by the customer).....	12
9	Servicing.....	12
9.1	Safety.....	12
9.2	Check on function, and recalibration.....	13
9.3	Cleaning and maintenance.....	13
10	Faults.....	13
10.1	Safety.....	13
10.2	Conduct in the event of faults.....	13
10.3	Fault table.....	13
10.4	Conduct following fault rectification.....	13

11	Removal, disposal.....	13
11.1	Safety.....	13
11.2	Removal.....	13
11.3	Disposal.....	14
12	Appendix.....	14
12.1	Data sheet for switches B7, D7 and T7.....	14
12.2	ATEX Declaration of conformity.....	15
12.3	IECEx Declaration of Conformity.....	16

# 1 General remarks

## 1.1 Purpose of this Manual

This Operating Manual contains fundamental and essential advice to be followed for the installation, operation and servicing of the device. It must be read without fail before assembly and start-up of the device by the fitter, the operator and the specialist personnel responsible for the device. This Operating Manual must be available at the point of use at all times.

The following sections about general safety information (2) and also the following specific advice regarding the intended purposes (2.2) and through to disposal (11.3) contain important safety information which, if not followed, may result in risks for people and animals, or to property and buildings.

## 1.2 Symbols



### Warning!

This indicates a possibly hazardous situation where failing to follow advice may result in risks to people, animals, the environment and buildings.



### Information!

This emphasizes key information for efficient, fault-free operation.

## 1.3 Limits of liability

Failure to respect this safety information, the envisaged uses or the limit values relating to use indicated in the technical data for the device may result in risk or to injury to people, the environment or the plant.

Claims for compensation for damage against the device supplier are excluded in such an eventuality.

## 1.4 Copyright

This Operating Manual may only be copied and passed on as a complete document without the special permission of the publisher.

## 1.5 Warranty

For the product described here, we offer a warranty pursuant to Section 6 Guarantee in Respect of Defects in our General Terms and Conditions of Delivery and Payment.

## 1.6 Manufacturer's address, customer services

**Ashcroft Instruments GmbH**

Max-Planck-Strasse 1

D-52499 Baesweiler. Germany

Tel.: +49 (0) 2401/808-888

Fax.: +49 (0) 2401/808-999

E-mail: [customer.service@ashcroft.com](mailto:customer.service@ashcroft.com)

Web: [www.ashcroft.eu](http://www.ashcroft.eu)

# 2 Safety

## 2.1 General sources of hazards

Pressure and temperature switches are generally a constituent part of a control and measurement system. Pressure switches are pressurized parts where failure can result in hazardous situations. The selection of switches should be made in accordance with the applicable standards, regulations and engineering practice.

The devices are only to be used for the intended purpose as described by the manufacturer.

The devices are precision built agency approved control device which features a mechanical snap action switch. Controllers are available for operation on pressure or vacuum (B7), differential pressure (D7) or temperature (T7) with fixed differential.

The integrated switching elements are SPDT micro switches, in case of intrinsically safe operation supplied by isolating switch amplifiers with certified intrinsically safe power circuits. If the set limit values are exceeded, the output circuits are opened or closed.

For each use scenario, the corresponding set-up regulations must be respected. If used in explosion risk areas, the following conditions are to be respected for the individual finishes.

## 2.2 Operator's responsibility

Safety instructions for proper operation of the device must be respected. They are to be provided by the operator for use by the respective personnel for installation, servicing, inspection and operation. Risks from electrical energy and from the released energy of the medium, from escaping media and from improper connection of the device must be eliminated. The details for this are to be found in the corresponding applicable set of regulations, such as DIN EN, UVV (accident prevention regulations) and in sector-specific instances of use (DVWG, Ex- GL, etc.) the VDE guidelines and the regulations supplied by local utilities companies.

The device must be taken out of service and secured against inadvertently being restarted, if the presumption is that risk-free operation is no longer possible (see Chapter 10: Faults).

Conversion works or other technical alterations to the device by the customer are not permitted. This also applies to installation of spare parts. Possible conversions or alterations may only be carried out by the manufacturer.

The operational safety of the device is only guaranteed where it is used for its intended purpose. The specification of the device must be adapted to the medium used in the plant. The limit values indicated in the technical data must not be exceeded.

The safety information detailed in this Operating Manual, existing national regulations for accident prevention, and the operator's internal regulations regarding working, operations and safety must be respected.

The operator is responsible for all specified servicing, inspection and installation works being carried out by authorized and qualified specialists.

## 2.3 Staff qualifications (target group assessment)

The device may only be installed and started up by specialist staff who are familiar with installation, start-up and operation of the product.

Specialist staff are people who are able to assess the work assigned to them on the basis of their specialist training, their knowledge and experience and their knowledge of the relevant standards, and can identify possible risks.

For devices in explosion-protected configuration, these staff must have been trained or instructed in, or be authorized for, working on explosion-protected devices in potentially explosive plants.

## 2.4 Signs/Safety markings

The switch and its surrounding packaging carry markings. These markings show the article number, measurement range and manufacturer. The switches can be provided with additional signs and safety markings advising on special conditions:

- Advice on calibration
- Ex (for ATEX configuration)

## 2.5 Safety equipment

This device is fitted with safety locking devices and electrical earthing. The detecting element, when filled, secures the operating rod preventing removal and contains two venting holes that ensure that the interior of the enclosure is not subject to pressure greater than 2 lb/ft<sup>2</sup>.

## 2.6 Environmental protection

This device contains electrical components. The provisions set out in the WEEE regulation EU directive 2012/19/EU on electrical and electronically equipment are to be respected, and the products are registered at the EAR under the number DE 26646349.

## 3 Use in explosion risk areas pursuant to Directive 2014/34/EU (ATEX)

### 3.1 Switch 700 Series: B7/D7/T7 intrinsically safe

#### Area of use:

Explosion risk areas Zone 0, 1 and 2, and 20, 21 and 22, risk from gases and dry dust.

#### Permitted temperatures:

Permitted ambient temperature -20 °C to +60 °C.

Permitted medium temperature in the pressure switch < 85 °C.

Permitted environment air with usual oxygen content (21 %), ambient pressure 80 kPa (0,8 bar) to 110 kPa (1,1 bar)



**Warning! With gaseous media, the device temperature may increase due to compression heat. In such cases, the rate of the pressure change must be regulated or the permitted temperature of the measuring medium reduced.**

To avoid additional temperature increase, the devices should not be exposed to direct exposure to sunlight when in operation!

#### EU design type test certification:

The Type Snap Action Switches 700 Series - B7 Pressure Switch, D7 Pressure Switch and the T7 Temperature Switch consist of either a single or dual micro-switch and associated terminal blocks located within an aluminum enclosure. The pressure or temperature sensing element transfers its response to a mechanically activated push rod. The push rod in turn activates the micro-switches. Electrical access to the terminal blocks is via cable entry ports located on either side of the enclosure.

The enclosure provides a degree of protection equivalent to IP6X as per EN 60529:2014.

The switches are to be powered via a suitably certified shunt zener diode safety barrier or alternatively a galvanic isolator. These devices shall be located within a non-hazardous area, coded [Ex ia] IIC and their output shall not exceed:

$U_i = 30 \text{ V}$      $I_i = 100 \text{ mA}$      $P_i = 650 \text{ mW}$      $L_i = 0$      $C_i = 0$

Compliance with the Essential Health and Safety Requirements, with the exception of those listed in the schedule to EC-type examination certificate, has been assured by compliance with the following documents:

IEC 60079-0: 2011

IEC 60079-11: 2011

EN 60079-0: 2012



EN 60079-11: 2012.

The documentation has been filed with CSA Group / SIRA (see declaration of conformity).

#### Labeling:

SIRA 04 ATEX 2081X

IECEX SIR 16.0018X

 2813  II 1GD

Ex ia IIC T4 Ga      ( $T_a = -20^\circ\text{C}$  to  $+60^\circ\text{C}$ )

Ex ia IIIC T135°C Da IP6X

Epoxy coated enclosures are non-conducting and may generate an ignition-capable level of electrostatic charges under certain extreme conditions. The user should ensure that the equipment is not installed in a location where it may be subjected to external conditions (such as high-pressure steam) which might cause a build-up of electrostatic charges on non-conducting surfaces. Additionally, cleaning of the equipment should be done only with a damp cloth.

The equipment shall be subjected to a routine test voltage of 500V rms; there shall be no breakdown of insulation as required by clause 10.3 of IEC 60079-0:2011.

## 4 Technical data

The detailed technical information can be found in the documents in the Appendix, Chapter 12.

## 5 Labeling on the device

The label with the serial number and type designation is located on the outside of the housing. The materials identifier is encoded in the type designation.

### 5.1 Labeling on the device for explosion risk areas (ATEX)

The label with the marking for explosion risk areas is located on the outside of the housing.

**Switch Series 700 certified intrinsically safe or dust ignition protection by enclosure:**

Pressure switch:


B7###CEN6### or B7###CEN7###

Differential pressure switch:

D7###CEN6### or D7###CEN7###

Temperature switch:

T7###CEN6### or T7###CEN7###

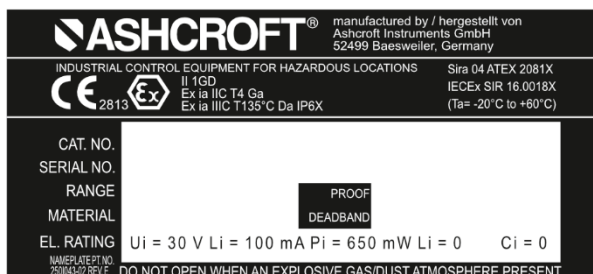

## 6 Construction and function

### 6.1 Overview

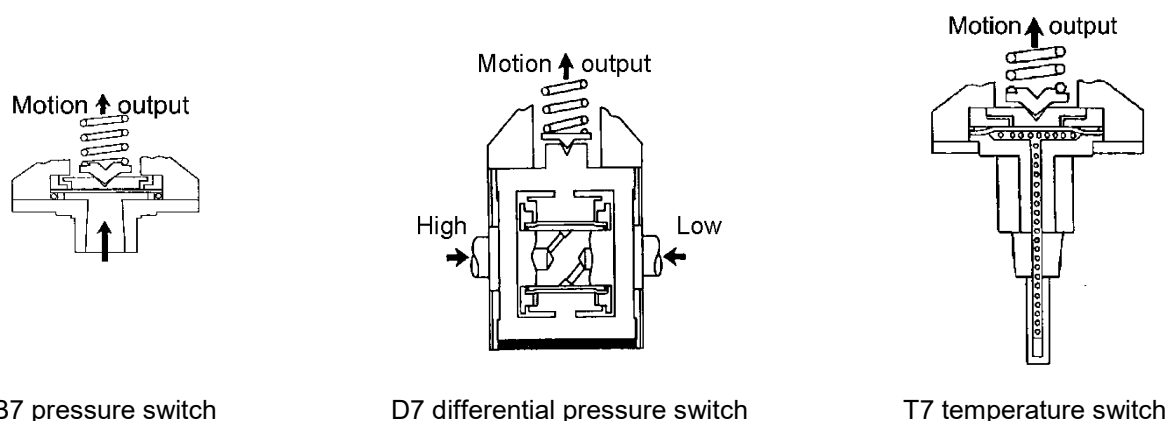


Figure 1

### 6.2 Description of function

The Ashcroft pressure switch is a precision built agency approved control device which features a mechanical snap action switch. Controllers are available for operation on pressure or vacuum, differential pressure or temperature with fixed or variable differential. Also manual reset types for operation on increasing or decreasing pressure. The manual reset types remain tripped until reset by pressing a button on top of the enclosure. Various wetted material constructions for compatibility with a range of pressure media may be obtained.

### 6.3 Description of components

#### 6.3.1 Process adapter of pressure switch B7

B-Series pressure and vacuum switches use two different actuators depending on setpoint requirements. For setpoints between 2 and 3000 psi, the simple, rugged diaphragm-sealed piston actuator is used. This design features high reliability and choice of actuator seal materials for virtually every application. An optional welded design is also available for setpoints up to 1000 psi for maximum reliability. This design is available in 316 SS or Monel.

For setpoints between 4.5 and 150 inches of H<sub>2</sub>O, a large diaphragm is used for increased sensitivity with good choice of materials of construction.

### 6.3.2 Process adapter of pressure switch D7

Differential pressure models use a unique, dual diaphragm-sealed piston design that features very high static operating pressures and small size.

For setpoints between 1.5 and 150 inches of H2O, a large diaphragm is used for increased sensitivity with good choice of materials of construction.

### 6.3.3 Process adapter of temperature switch T7

B-Series temperature switches feature a SAMA Class II vapor pressure thermal system. This system provides quick, accurate response to process temperature changes with negligible ambient temperature effects. This is inherent in the design due to the precise relationship that exists between temperature and pressure according to the vapor pressure laws. A wide selection of sensing bulb and armored capillary lengths is available. The vapor pressure system design features small bulb sizes, making installation easy and cost-effective.

### 6.3.4 Set point adjustment

A single setpoint adjustment nut (7/8”) is located centrally at the bottom on the inside of the enclosure.

### 6.3.5 Micro switch

Standard electrical switch is SPDT, available with various electrical characteristics. Two SPDT switch elements mounted together are available except on variable Deadband and manual reset types.

Microswitch Code		Electrical rating	
Single	Dual	VAC	VDC
20	61	15 A, 250 V	0,4 A, 120 V
21	65	5 A, 250 V	
22	67	5 A, 250 V	2,5 A, 28 V
23		22 A, 250 V	
24	64	15 A, 480 V	0,25 A, 250 V
25		10 A, 250 V	10 A, 250 V
26	62	15 A, 250 V	0,4 A, 120 V
27	63	15 A, 250 V	
28		15 A, 250 V	
29		15 A, 250 V	
31	70	1 A, 250 V	50 mA, 60 V
32	68	11 A, 250V	5 A, 30 V
42	71	1 A, 125 V	
50		15 A, 250 V	
35		10 A, 250 V	0,3 A, 250 V

**Table 1: Micro switch electrical ratings**

### 6.3.6 Enclosure

The Ashcroft snap action pressure switch is furnished in the flameproof NEMA 7 & 9 (protection IP66) and ATEX Ex ia and dust ignition protected (minimum enclosure rating IP20) enclosure styles. Enclosure is epoxy coated aluminum casting.

## 6.4 Accessories

Please contact the manufacturer regarding special tools and accessories.

## 7 Transport

### 7.1 Safety

The switch should be protected against the effects of knocks and impacts. The device should only be transported in the packaging provided. The device should only be transported in a clean condition (free of residues of measuring media).

### 7.2 Transport inspection



The delivery must be checked for completeness and damage during transport. In the event of damage during transport, the delivery must not be accepted, or only accepted subject to reservation of the scope of the damage being recorded and, if necessary, a complaint initiated.

### 7.3 Storage

The switch must be stored in dry, clean conditions, within a temperature range of -40 to +60 °C, protected against direct exposure to sunlight and protected against impact damage.

## 8 Assembly/Installation

### 8.1 Safety

To ensure safe working during installation and servicing, suitable shut-off valves must be installed in the plant (see 6.4 Accessories), enabling the device:

- To be depressurized or taken out of operation;
- To be disconnected from the mains supply for repair or checks within the relevant plant;
- Or to enable function tests of the device to be performed “on site”.

During the works to mount/install the switch, the plant must be protected against being switched back on.

### 8.2 Preparations (requirements for the installation location)

- A check on suitability of the device for the medium to be measured, the scope of the measurement range and of the protection against special conditions such as vibrations, pulsations and pressure spikes.
- A bracket must be installed to support the switch if the metering pipe is not able to provide adequate support.
- Ambient Temperature: -20 to 60°C
- Process Temperature: -20 to 60°C, other temperature limits are possible with different diaphragm materials
- Refer to appropriate datasheet for materials of construction and technical information.
- These controls are precision instruments and should never be left with internal components exposed. During installation insure that covers are in place and conduit openings are closed except when actually working on the control.
- To minimize the risk of injury, the control must be installed according to the required safety and electrical codes.
- To attain the degree of protection listed on the switch it may be necessary to add required conduit fittings.
- The switch must be protected from moisture, shock and/or extreme vibration.
- Mounting position: Switch can be mounted in any position. It is recommended that unit be set in intended operating position.



#### **Cautions:**

Always install the cover after wiring the switch and before power is supplied.

- Before removing the cover in hazardous areas be sure there is no explosive atmosphere present and the power supply is turned off.
- For ATEX approved switches all safety locking devices and electrical earthing must be installed or connected before operating.
- Never carry a temperature switch by holding only the stem, bulb or capillary.
- Do not push any foreign objects (ex. Screwdrivers) against the diaphragm.
- Do not exceed ranges, current and/or voltage limits.

### 8.3 Mounting/Installation

### 8.3.1 Process connection

As standard, the device is equipped for pipework mounting with a pressure connection shank pursuant to DIN EN 837-3. The device is calibrated ex works for vertical installation.

- Connection to be undertaken by authorized and qualified specialist staff only.
- Three holes external to the enclosure for surface mounting. Location of these holes is shown in the general dimension drawing.
- Units may also be mounted directly on the pressure line using the pressure connection.
- Use only with the mechanical process connection provided – regarding the configuration, see order code on the device type label, with a matching threaded seal.
- When connecting the device, the pipes must be depressurized.
- The pressure metering pipe must be laid inclined in such a way that, for example, for measurements of fluids no air pockets can form, and for measurements of gases no water pockets. If the necessary incline is not achieved, then at suitable points water separators or air separators must be installed.
- The pressure metering pipe must be kept as short as possible and laid without sharp bends, to avoid the occurrence of irritating delays.
- With liquid measurement media, the pressurized connection pipe must be degassed, since any gas bubble inclusions result in measurement error.
- If water is used as the measurement medium, the device must be frost-protected.



Safety notice: When tightening control to pressure line, always use the wrench flats or hex on the lower housing, and do not twist the device itself.


### 8.3.2 Electrical connection



Take note of the electrical data in the EU design type test certification and the locally-applicable regulations and guidelines for installing and operating electrical plant in explosion risk areas (e.g. EN 60079-14, etc.).

- Connection to be undertaken by authorized and qualified specialist staff only.
- The electrical connection of the device is to be undertaken in accordance with the relevant regulations of the VDE and the regulations supplied by the local utilities company.
- Disconnect the plant from the mains supply before wiring electrical connections.
- Before operating the switch all conduit entries and/or junction boxes need to be closed according to the required safety and electrical codes.
  - a) Standard product has two 3/4 NPT conduit holes with one permanent plug. 3/4 NPT conduit holes can be modified or reduced with ATEX approved adapters.
  - b) Available ATEX approved cable glands can be used.
- It is recommended that Teflon tape or other sealant be used on conduit, bushing, gland or plug threads to ensure integrity of the enclosure.
- Cable couplers, glands and conduit connectors must have the correct electrical approvals.
- Always follow safety and electrical regulations when connecting these devices.
- The system ground of the device is marked with a green colored screw and/or by the ground symbol.
- ATEX approved switches have an external ground screw that must be connected..

NO (Normally Open) Blue  
 NC (Normally Closed) Red  
 C (Common) White

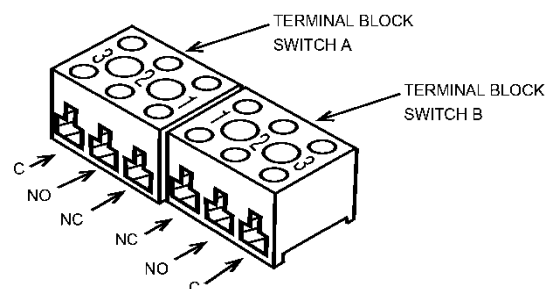

## Figure 2: Micro switch terminals and wire color codes

- SPDT – Wire directly to the switch according to circuit requirements.
- 2 SPDT – Wire to front switch terminal block (left) and rear switch terminal block (right) as marked. Strip insulation 5/16", insert in proper terminal connector and tighten clamping screw to secure.

## 8.4 Starting up and setpoint adjustment

The precondition for start-up is proper installation of all electrical feed lines and metering pipes. All connecting lines must be laid such that no mechanical forces can act on the device.

Before start-up, the seal on the pressurized connection line must be checked.



**Note** – As indicated below, adjustment of setpoint is made by use of 7/8" nut. Precision switch element mounting screws and bracket adjusting screw are factory sealed and should not be tampered with.

### 8.4.1 Pressure switch model B7

A single setpoint adjustment nut (7/8") is located centrally at the bottom on the inside of the enclosure.

For accurate setpoint calibration, mount the switch on a calibration stand, a pump or catalog No. 1305 deadweight gauge tester. A suitable reference standard such as an ASHCROFT Duragauge or Test Gauge is necessary to observe convenient changes in pressure.

As received, the pressure switch will normally be set to approximately 90% of the indicated range. Pressurize the system to required setpoint and turn the adjustment nut until switch changes mode. Direction of turning is indicated on a label affixed to the inside of the control enclosure. When setpoint has been achieved raise and lower pressure to insure that setpoint is correct.

After installation of the control replace cover to insure electrical safety and to protect internal parts from the environment.



**Note** – Since vacuum models are already above setpoint at atmosphere, the Normally Open (NO) circuit will be closed as received.

### 8.4.2 Differential pressure switch model D7 (high range)

A single setpoint adjustment nut (7/8") is located centrally at the bottom on the inside of the enclosure.

The direction of turning is indicated on a label affixed to the inside of the control enclosure.

A typical calibration procedure would be as follows:

Static Working Pressure	- 600 psig
Adjustable Differential Range	- 5/200 psid
Differential Setpoint	- 150 psi above static working pressure.

Simultaneously raise the high and low side pressure to 600 psig. Maintain the low side pressure at 600 psig. Raise the high side pressure to 750 psig to obtain 150 psi differential.

Turn the adjustment nut until the switch changes mode at 150 psi differential. When the setpoint has been achieved, raise and lower the high side pressure to ensure that the differential setpoint is correct.

After installation of the control replace cover to insure electrical safety and to protect internal parts from the environment.

### 8.4.3 Differential pressure switch model D7 (low range)

A single setpoint adjustment nut (7/8") is located centrally at the bottom on the inside of the enclosure.

The direction of turning is indicated on a label affixed to the inside of the control enclosure. XG5 controls have a setpoint indication scale adjacent to the adjustment nut. To adjust the control, align the top of the adjustment nut hex with the indicator line on the scale. Do not force adjustment or attempt to exceed the maximum setting shown on the scale or nameplate.

For accurate setpoint calibration or for controls without a scale mount the control on a calibration stand so that the HIGH and LOW pressures expected under operating conditions may be obtained. Suitable reference standards are necessary for each pressure.



**Note** – Due to the sensitivity of these controls it is imperative that the LOW pressure side volume be large to prevent a setpoint shift between calibration and field installation. If this is not possible, an approximate setpoint under operating conditions can be obtained by setting the operating point with the low side open to atmosphere. A final setpoint adjustment can be made after installation.

Apply LOW pressure. Then apply HIGH pressure to the required setpoint and turn the adjustment nut until the switch operates. When the setpoint has been achieved, raise and lower HIGH pressure to ensure that the differential pressure between the HIGH and LOW pressures is correct.

After installation of the control, replace the cover to ensure electrical safety and to protect the internal parts from the environment.

#### **8.4.4 Temperature switch model T7**

A single setpoint adjustment nut (7/8") is located centrally at the bottom on the inside of the enclosure.

The bulb of the control should be immersed in a bath at the desired setpoint temperature. Optimum performance will be obtained if the bulb is fully immersed. Allow five minutes for initial stabilization.

As received, the temperature switch will normally be set to approximately 90% of the indicated range. After stabilization, turn the adjustment nut until switch changes mode. Direction of turning is indicated on a label affixed to the inside of the control enclosure. When setpoint has been achieved raise and lower temperature to insure that the setpoint is correct.

After installation of the control replace cover to insure electrical safety and to protect internal parts from the environment.

#### **8.4.5 B750, D750 and T750 Variable Deadband Switches**

Deadband is varied by rotating the wheel on the precision switch. When viewed from the front of the enclosure, rotation to the left increases deadband – rotation to the right decreases deadband. Letters on the wheel may be used as a reference. Deadbands obtainable will vary from 0.5% to 9% of pressure or temperature range depending on range segment and type of diaphragm.

Adjustment of Setpoint – As received, the switch will normally be set to approximately 90% of range. Rotate the wheel on the MICRO SWITCH all the way to the right; this will provide smallest deadband. Pressurize, or increase bath temperature, to the required setpoint and turn the adjustment nut until the switch changes mode. Lower the pressure to reset the switch. Rotate the wheel on the MICRO SWITCH until the desired deadband is obtained. The upper setpoint will be changing upward with this adjustment. Lower the pressure to reset the switch. Then increase the pressure to the desired setpoint and turn the adjusting nut until the switch changes mode. Lower the pressure and check resetpoint and deadband.

### **8.5 Subsequent relocation of the switch (by the customer)**



**Recommendation:** Do not remove the switch from one metering point and fit it in a different place, as there is a risk of the measuring media being mixed, with unforeseeable chemical reactions.

## **9 Servicing**

All ASHCROFT switches require little or no maintenance.

- Be sure that the case is closed at all times.
- When the switch is exposed to process media that may harden and/or build up in the pressure port, the switch should be removed and cleaned as needed.

However, to ensure reliable operation and a long lifetime for the device, we recommend that it is checked regularly.

### **9.1 Safety**

When undertaking servicing work on the device, the pressure lines must be depressurized, the electrical connections isolated from the mains supply, and the plant secured against being switched on again.

## 9.2 Check on function, and recalibration

The check on function and recalibration is carried out at regular intervals, depending on the application. The precise testing cycles should be adjusted in line with the operating conditions and ambient conditions. In the event of various device components interacting, the operating instructions for all other devices should also be taken into account.

- Check on function, in conjunction with downstream components.
- Check of pressurized connection pipes for seal condition.
- Check of electrical connections.

## 9.3 Cleaning and maintenance

- Never use aggressive solvents.
- Do not use high-pressure water to clean the switch.

# 10 Faults

## 10.1 Safety

Defective or faulty switches put the operational safety and process safety of the plant at risk, and can lead to a risk or injury to persons, the environment or the plant.

## 10.2 Conduct in the event of faults

All defective or faulty devices must be taken out of service. If a repair is required, the device must be sent directly to our Repairs Department. We request that all returns of devices are agreed with our Service Department.

## 10.3 Fault table

Possible situations indicating a fault:

- Setpoint shift or deadband out of range
- Random switch function
- Corrosion at process connection and diaphragm
- Leakage of process media
- Bended stem or bulb
- Sharp edged bended capillary line
- Damage to housing or wiring

In these instances, replacement of the switch is always required.

## 10.4 Conduct following fault rectification

See Chapter 8.3 Mounting/Installation

# 11 Removal, disposal

## 11.1 Safety



Residues of measuring media in and on removed switches can constitute a risk to people, the environment and equipment. Adequate precautionary measures must be adopted. If necessary, the devices must be cleaned thoroughly (see advice in safety data sheets).

## 11.2 Removal

- When undertaking servicing work on the device, the pressure lines must be depressurized, the electrical connections isolated from the mains supply, and the plant secured against being switched on again.
- Demount the switch using a suitable tool

## 11.3 Disposal



Please help to protect the environment and dispose of or recycle the devices and components used in accordance with the applicable regulations.

## 12 Appendix

### 12.1 Data sheet for switches B7, D7 and T7

More detailed datasheets are available direct from the manufacturer (see 1.6 Manufacturer's address, customer services).

The table below contains an overview of the individual documents.

<b>Model</b>	<b>Description</b>	<b>Document</b>
B7	Pressure switch series B4 and B7	G4.SW10-P
D7	Differential pressure switch series D4 and D7	G4.SW10-P
T7	Temperature switch series T4 and T7	G4.SW10-T



## 12.2 ATEX Declaration of conformity

 <b>EU-Konformitätsbescheinigung</b> <i>EU-Declaration of Conformity</i> DIN EN ISO IEC 17050-1:2010	
<b>Ashcroft Instruments GmbH</b> Max-Planck-Straße 1 52499 Baesweiler	
erklärt in alleiniger Verantwortung, dass die mit CE gekennzeichneten Produkte <i>declares in sole responsibility that the products marked with CE</i>	
Gerät: <i>Equipment:</i>	Druck- / Temperaturschalter vom Typ B7/D7/T7 die mittels Wegänderung einen Mikroschalter betätigten. <i>Pressure- / Temperature switch, using a micro switch actuated by movement of a piston cylinder unit.</i>
Kennzeichnung: <i>Marking:</i>	SIRA 04 ATEX 2081X / IECEx SIR 16.0018X
  2813 II 1GD Ex ia IIC T4 Ga Ta= -20°C to +60°C Ex ia IIIC T135° C Da	
Herstellungsdatum: <i>Date of manufacture:</i>	ab 01.11.2019 <i>from 01.11.2019</i>
die grundlegenden Sicherheits- und Schutzanforderungen erfüllen, in Übereinstimmung mit den unten genannten Richtlinien und Normen. Die Konformitätsaussage bezieht sich auf die Konzeption und Fertigung der oben genannten Produkte. <i>the fundamental safety and protection requirements passed in accordance with the guidelines and standards listed below. This declaration of conformity refers to the design and manufacture of the above products.</i>	
Richtlinie <i>Directive</i>	2014/34/EU „Geräte und Schutzsysteme zur bestimmungsgemäßen Verwendung in explosionsgefährdeten Bereichen“ <i>“equipment and protective systems intended for use in potentially explosive atmospheres”</i>
Angewendete harmonisierte Normen <i>Used harmonized Standards</i>	IEC 60079-0:2011 Ed.6, IEC 60079-11:2011 EN 60079-0:2012 + A11:2013, EN 60079-11:2012
Benannte Stelle <i>Notification Body</i>	Code number of notified Body: 2813 CSA Group Netherlands B.V. Utrechtseweg 310 (B42) 6812AR Arnhem, Netherlands
Nachweis <i>Proof</i>	Assessment Report Sira R27926A/00
Richtlinie <i>Directive</i>	2014/35/EU „Niederspannungsrichtlinie“ <i>“Electrical equipment designed for use within certain voltage limits”</i>
Angewendete harmonisierte Normen <i>Used harmonized Standards</i>	EN 61010-1:2010, EN 60947-7-1 bis 3:2010
Richtlinie <i>Directive</i>	<sup>(1)</sup> 2014/68/EU „Druckgeräterichtlinie“ <i>“Pressure Equipment Directive”</i>
<sup>(1)</sup> PS >200 bar und V <0,1l, Artikel 4 Drucktragende Ausrüstungsteile, Modul A <i>PS &gt;200 bar and V &lt;0,1l, Article 4 Pressure Accessories, Module A</i>	
Baesweiler, den 01.11.2019 Ort und Datum <i>Place and date</i>	 WERKSLEITER Operations Manager
Ashcroft Instruments GmbH Fon: +49 (0)2401-808-888 Fax: +49 (0)2401-7027 www.ashcroft.eu	 

### 12.3 IECEx Declaration of Conformity

		<h2>IECEx Certificate of Conformity</h2>	
<p><b>INTERNATIONAL ELECTROTECHNICAL COMMISSION</b> <b>IEC Certification Scheme for Explosive Atmospheres</b> for rules and details of the IECEx Scheme visit <a href="http://www.iecex.com">www.iecex.com</a></p>			
Certificate No.:	IECEx SIR 16.0018X	issue No.:0	Certificate history:
Status:	Current		
Date of Issue:	2016-06-08	Page 1 of 4	
Applicant:	<b>Ashcroft Instruments GmbH</b> Max-Planck-Straße 1 Postfach 1120 D-52499 Baesweiler Germany		
Electrical Apparatus:	<b>Type Snap Action Switches - B7 Pressure Switch, D7 Differential Pressure Switch &amp; T7 Temperature Switch</b>		
Optional accessory:			
Type of Protection:	<b>Intrinsically Safe</b>		
Marking:	Ex ia IIC T4 Ga Ex ia IIIC T135°C Da Ta = -20°C to +60°C IP 6X		
Approved for issue on behalf of the IECEx Certification Body:	N Jones		
Position:	Certification Manager		
Signature: (for printed version)			
Date:	2016-06-08		
<p>1. This certificate and schedule may only be reproduced in full. 2. This certificate is not transferable and remains the property of the issuing body. 3. The Status and authenticity of this certificate may be verified by visiting the <a href="http://www.iecex.com">Official IECEx Website</a>.</p>			
Certificate issued by:			
<b>SIRA Certification Service</b> CSA Group Unit 6, Hawarden Industrial Park Hawarden Deeside CH5 3US United Kingdom			





## IECEx Certificate of Conformity

Certificate No.: IECEx SIR 16.0018X  
 Date of Issue: 2016-06-08 Issue No.: 0  
 Page 2 of 4

Manufacturer: **Ashcroft Instruments GmbH**  
 Max-Planck-Straße 1  
 Postfach 1120  
 D-52499 Baesweiler  
 Germany

Additional Manufacturing location  
 (s):

This certificate is issued as verification that a sample(s), representative of production, was assessed and tested and found to comply with the IEC Standard list below and that the manufacturer's quality system, relating to the Ex products covered by this certificate, was assessed and found to comply with the IECEx Quality system requirements. This certificate is granted subject to the conditions as set out in IECEx Scheme Rules, IECEx 02 and Operational Documents as amended.

#### STANDARDS:

The electrical apparatus and any acceptable variations to it specified in the schedule of this certificate and the identified documents, was found to comply with the following standards:

**IEC 60079-0 : 2011** Explosive atmospheres - Part 0: General requirements  
 Edition: 6.0  
**IEC 60079-11 : 2011** Explosive atmospheres - Part 11: Equipment protection by intrinsic safety "I"  
 Edition: 6.0

*This Certificate **does not** indicate compliance with electrical safety and performance requirements other than those expressly included in the Standards listed above.*

#### TEST & ASSESSMENT REPORTS:

*A sample(s) of the equipment listed has successfully met the examination and test requirements as recorded in*

Test Report:  
 GB/SIR/ExTR16.0150/00

Quality Assessment Report:  
 GB/SIR/QAR10.0013/04



# IECEx Certificate of Conformity

Certificate No.: IECEx SIR 16.0018X  
 Date of Issue: 2016-06-08 Issue No.: 0  
 Page 3 of 4

**Schedule**

**EQUIPMENT:**  
 Equipment and systems covered by this certificate are as follows:

Example of model number

Type	Switch element	Material actuator seal	Range	Engineering unit	Protection	Process connection	Electrical connection	Option
B7	24	B	100	PSI	CEN6	25	JL	NH

CEN6 is Ex ia with standard case without any option  
 CEN7 is Ex ia with Ex d cable gland

The Type Snap Action Switches (B7 Pressure Switch, D7 Differential Pressure Switch and the T7 Temperature Switch) consists of either a single or dual micro-switch, or associated terminal blocks located within a metallic enclosure. The enclosure is a cylindrical two-part enclosure, consisting of a base and cover, manufactured from die-cast aluminium, aluminium alloy or stainless steel. The cover threads into the base which has three bosses at 90° apart on its side walls. The two opposing bosses each contain a ¼" NPT cable entry port while the other boss provides a facility, allowing connection to a mechanically activated push rod, which receives a response from the pressure or temperature sensing element. The push rod in turn activates the micro-switches. Electrical access to the terminal blocks is via cable entry ports located on either side of the enclosure via the ¼" NPT bosses. The switches are to be powered via a suitably certified shunt zener diode safety barrier or alternatively a galvanic isolator.

**CONDITIONS OF CERTIFICATION: YES as shown below:**

- Epoxy coated enclosures are non-conducting and may generate an ignition-capable level of electrostatic charges under certain extreme conditions. The user should ensure that the equipment is not installed in a location where it may be subjected to external conditions (such as high-pressure steam) which might cause a build-up of electrostatic charges on non-conducting surfaces. Additionally, cleaning of the equipment should be done only with a damp cloth.



## IECEx Certificate of Conformity

Certificate No.: IECEx SIR 16.0018X

Date of Issue: 2016-06-08

Issue No.: 0

Page 4 of 4

### EQUIPMENT(continued):

The equipment has the following safety description:

Ui = 30V

Ii = 100mA

PI = 650mW

CI = 0

LI = 0

### Conditions of manufacture

The Manufacturer shall comply with the following:

1. The equipment shall be subjected to a routine test voltage of 500V rms; there shall be no breakdown of insulation as required by clause 10.3 of IEC 60079-11:2011.