

# Installation and Maintenance Instruction Manual



## Differential pressure gauge, model F5503 and F5503-HP

for explosion risk areas pursuant to Directive 2014/34/EU (ATEX) In the following configuration:

- ###F5503###ATEX differential pressure gauge without switching contact
- ###F5503###I####ATEX differential pressure gauge with inductive proximity switches
- ###F5503-HP###ATEX differential pressure gauge high static pressure without switching contact
- ###F5503-HP###I###ATEX differential pressure gauge high static pressure with inductive proximity switches



#### **▼** ASHCROFT®

#### Table of contents:

1 G	General remarks	4
1.1		
1.2	·	
1.3	•	
1.4		
1.5		
1.6	•	
2 S	Safety	
2.1		
2.2	Use in accordance with intended purpose	4
2.3		
2.4	Staff qualifications (target group assessment)	5
2.5	Signs/Safety markings	5
2.6	Safety equipment	5
2.7		
3 U	Jse in explosion risk areas pursuant to Directive 2014/34/EU (ATEX)	6
3.1		
3.2	F5503 I#### and F5503-HP I#### with inductive proximity switches SJ2-N	6
4 T	Fechnical data	
5 L	_abeling on the device	
5.1	Labeling on the device for explosion risk areas (ATEX)	8
6 C	Construction and function	
6.1	Overview	
6.2	Description of function	
6.1	Description of components	
6.2	Accessories	
7 T	Fransport	10
7.1	Safety	10
7.2	Transport inspection	10
7.3	Storage	10
8 A	Assembly/Installation	10
8.1	Safety	10
8.2	Preparations (requirements for the installation location)	10
8.3	Mounting/Installation	10
8.4	Starting up	11
8.5	Subsequent relocation of the gauge (by the customer)	12
9 S	Servicing	12
9.1	Safety	12
9.2	Check on function, and recalibration	12
9.3	Cleaning and maintenance	12
10	Faults	13
10.1	1 Safety	13
10.2	2 Conduct in the event of faults	13

#### ■ ASHCROFT®

10.3	Fault table	13
10.4	Conduct following fault rectification	13
11 Re	emoval, disposal	13
11.1	Safety	13
11.2	Removal	13
11.3	Disposal	13
12 Ap	pendix	14
12.1	Declaration of conformity model F5503 and F5503-HP	14
12.2	Declaration of conformity model F5503 and F5503-HP with contacts	16
12.3	EU design type test certification for inductive proximity switches of types SJ2-N	18
12.4	Data sheet for differential pressure gauge F5503/F5503-HP	29

#### ASHCROFT®

#### 1 General remarks

#### 1.1 Purpose of this Manual

This Operating Manual contains fundamental and essential advice to be followed for the installation, operation and servicing of the device. It must be read without fail before assembly and start-up of the device by the fitter, the operator and the specialist personnel responsible for the device. This Operating Manual must be available at the point of use at all times.

The following sections about general safety information (2) and also the following specific advice regarding the intended purposes (2.2) and through to disposal (11.3) contain important safety information which, if not followed, may result in risks for people and animals, or to property and buildings.

#### 1.2 Symbols



#### Warning!

This indicates a possibly hazardous situation where failing to follow advice may result in risks to people, animals, the environment and buildings.



#### Information!

This emphasizes key information for efficient, fault-free operation.

#### 1.3 Limits of liability

Failure to respect this safety information, the envisaged uses or the limit values relating to use indicated in the technical data for the device may result in risk or to injury to people, the environment or the plant.

Claims for compensation for damage against the device supplier are excluded in such an eventuality.

#### 1.4 Copyright

This Operating Manual may only be copied and passed on as a complete document without the special permission of the publisher.

#### 1.5 Warranty

For the product described here, we offer a warranty pursuant to Section 6 Guarantee in Respect of Defects in our General Terms and Conditions of Delivery and Payment.

#### 1.6 Manufacturer's address, customer services

 Ashcroft Instruments GmbH
 Tel.: +49 (0) 2401/808-888

 Max-Planck-Strasse 1
 Fax.: +49 (0) 2401/808-999

D-52499 Baesweiler. Germany E-mail: <a href="mailto:customer.service@ashcroft.com">customer.service@ashcroft.com</a>

Web: www.ashcroft.eu

## 2 Safety

#### 2.1 General sources of hazards

Pressure gauges are pressurized parts where failure can result in hazardous situations. The selection of pressure gauge should be made in accordance with the rules set out in EN 837-2 & DIN 16003.

#### 2.2 Use in accordance with intended purpose

The devices are only to be used for the intended purpose as described by the manufacturer.

The devices are used for direct display of differential pressure.

The integrated switching elements are inductive proximity switches with a groove design, supplied by isolating switch amplifiers with certified intrinsically safe power circuits. If the set limit values are exceeded, the output circuits are opened or closed.

For each use scenario, the corresponding set-up regulations must be respected. If used in explosion risk areas, the following conditions are to be respected for the individual finishes.

#### 2.3 Operator's responsibility

Safety instructions for proper operation of the device must be respected. They are to be provided by the operator for use by the respective personnel for installation, servicing, inspection and operation. Risks from electrical energy and from the released energy of the medium, from escaping media and from improper connection of the device must be eliminated. The details for this are to be found in the corresponding applicable set of regulations, such as DIN EN, UVV (accident prevention regulations) and in sector-specific instances of use (DVWG, Ex-. GL, etc.) the VDE guidelines and the regulations supplied by local utilities companies.

The device must be taken out of service and secured against inadvertently being restarted, if the presumption is that risk-free operation is no longer possible (see Chapter 10: Faults).



Conversion works or other technical alterations to the device by the customer will violate the approval for hazardous area and are not permitted. This also applies to installation of spare parts. Possible conversations or alterations may only be carried out by the manufacturer.

The operational safety of the device is only guaranteed where it is used for its intended purpose. The specification of the device must be adapted to the medium used in the plant. The limit values indicated in the technical data must not be exceeded.

The safety information detailed in this Operating Manual, existing national regulations for accident prevention, and the operator's internal regulations regarding working, operations and safety must be respected.

The operator is responsible for all specified servicing, inspection and installation works being carried out by authorized and qualified specialists.

The operator is responsible that the device is used in the correct ATEX zone.

#### 2.4 Staff qualifications (target group assessment)

The device may only be installed and started up by specialist staff who are qualified for installation, start-up and operation of the product.

Specialist staff are people who are able to assess the work assigned to them on the basis of their specialist training, their knowledge and experience and their knowledge of the relevant standards, and can identify possible risks.

For devices in explosion-protected configuration, these staff must have been trained or instructed in, or be authorized for, working on explosion-protected devices in potentially explosive plants.

#### 2.5 Signs/Safety markings

The pressure gauge and its surrounding packaging carry markings. These markings show the article number, measurement range and manufacturer. The pressure gauge can be provided with additional signs and safety markings advising on special conditions:

- Advice on the filling liquid
- Advice on calibration
- Ex (for ATEX configuration)
- Oil-can deleted (if oxygen is used)

#### 2.6 Safety equipment

This device is constructed with separate pressure chambers and case for display and can be considered as solid front safety design. For a description, please refer to Chapter 6.2. The window uses multi-layer safety glass.

#### 2.7 Environmental protection

This device may optionally contain a filling liquid (e.g. glycerin or silicone oil). The provisions set out in the REACH regulation on production and use of chemicals are to be respected, and the relevant safety data sheets from the manufacturers of the chemicals are available on our website for download.

## 3 Use in explosion risk areas pursuant to Directive 2014/34/EU (ATEX)

#### 3.1 F5503 and F5503-HP without switching contact

#### Area of use:

Explosion risk areas Zone 1 and 2, and 21 and 22, risk from gases and dry dust

#### **Permitted temperatures:**

The maximum occurring surface temperature of 95 °C was determined with no covering of dust and with no safety factor.

For dust clouds and dust layers the ignition temperature must be specified pursuant to ISO / IEC 80079-20-2

- For dust clouds the maximum allowable medium temperature inside of the measuring instrument must not exceed 2/3 of the dust ignition temperature
- For dust layer the maximum allowable medium temperature inside of the measuring instrument must be 75K lower than the dust ignition temperature

Permitted ambient temperature -20°C to +60 °C.

Permitted medium temperature in the pressure gauge < 85 °C.

Permitted environment air with usual oxygen content (21%), ambient pressure 80 kPa (0,8 bar) to 110 kPa (1,1 bar)



Warning! With gaseous media, the device temperature may increase due to compression heat. In such cases, the rate of the pressure change must be regulated or the permitted temperature of the measuring medium reduced.

#### Note:

For a change in differential pressure between 10 % and 90 % of the measuring range and a pulse frequency of < 0.06 Hz, the temperature increase is <10 K.


To avoid additional temperature increase, the devices should not be exposed to direct exposure to sunlight when in operation!

For the non-electrical part of the devices, the, EN ISO 80079-36, EN ISO 80079-37, EN 60079-0 and EN 60079-31, are applicable with regard to explosion protection. The relevant requirements of these standards are satisfied.

The documentation has been filed with TÜV-Nord-Cert NB 0044 (see declaration of conformity).

Labeling:





#### 3.2 F5503 I#### and F5503-HP I#### with inductive proximity switches SJ2-N

#### Area of use:

Explosion risk areas Zone 1 and 2, and 21 and 22, risk from gases and dry dust.

#### Permitted temperatures:

The maximum occurring surface temperature of 95 °C was determined with no covering of dust and with no safety factor For dust clouds and dust layers the ignition temperature must be specified pursuant to ISO / IEC 80079-20-2

- For dust clouds the maximum allowable medium temperature inside of the measuring instrument must not exceed 2/3 of the dust ignition temperature
- For dust layer the maximum allowable medium temperature inside of the measuring instrument must be 75K lower than the dust ignition temperature.

Permitted ambient temperature -20 °C to +60 °C.

Permitted medium temperature in the pressure gauge < 85 °C.

Permitted environment air with usual oxygen content (21%), ambient pressure 80 kPa (0,8 bar) to 110 kPa (1,1 bar)





Warning! With gaseous media, the device temperature may increase due to compression heat. In such cases, the rate of the pressure change must be regulated or the permitted temperature of the measuring medium reduced.

#### Note:

For a change in differential pressure between 10 % and 90 % of the measuring range and a pulse frequency of < 0.06 Hz, the temperature increase is <10 K.

To avoid additional temperature increase, the devices should not be exposed to direct exposure to sunlight when in operation!

#### EU design type test certification for the installed inductive proximity switches:

PTB 99 ATEX 2219X 4. supplement

The integrated proximity switch is indicated on the type label/wiring diagram.

The surrounding housing has protection class IP65 as per EN 60529.



For use in explosion risk areas, the devices must be connected to certified intrinsically safe power circuits:

 $\begin{array}{lll} \text{Max. voltage} & \text{$U_{\text{max}}$} & = 16 \text{ V} \\ \text{Max. current} & \text{$I_{\text{max}}$} & = 25 \text{ mA} \\ \text{Max. power} & \text{$P_{\text{max}}$} & = 64 \text{ mW} \\ \end{array}$ 

Device data (per contact):

max. internal capacitance Ci max = 30 nF max. internal inductance Li max = 100 µH

The permitted limit values for U<sub>i</sub>, I<sub>i</sub> and P<sub>i</sub> for the intrinsically safe feed power circuits depend on the proximity switch type. They are to be found in the respective EU design type test certifications.

For the non-electrical part of the devices, the standards, EN ISO 80079-36, EN ISO 80079-37, EN 60079-0 and EN 60079-31 are applicable with regard to explosion protection. The relevant requirements of these standards are satisfied.

The documentation for the mechanical part has been filed with TÜV-Nord-Cert NB 0044 (see declaration of conformity).

#### Labeling:






II 2G Ex h IIC T4 Gb II 2D Ex h IIIC T95°C Db Ta = -20°C to +60°C

#### PTB 99 ATEX 2219 X Supplement 4



II 2G Ex ia IIC T6...T1 Gb



#### Recommended isolating switch devices:

MTL 5011B 1-channel, for contacts/inductive proximity switch, operating voltage 20-35 VDC

MTL 5015 2-channel, for contacts/inductive proximity switch, operating voltage 20-35 VDC

KFA6-SR2-Ex1.W 1-channel, for contacts/inductive proximity switch, operating voltage 230 VAC

KFA6-SR2-Ex2.W 2-channel, for contacts/inductive proximity switch, operating voltage 230 VAC

## 4 Technical data

The detailed technical information can be found in the documents in the Appendix, Chapter 12.

## 5 Labeling on the device

The label with the serial number and type designation is located on the outside of the housing. The materials identifier is encoded in the type designation.


## 5.1 Labeling on the device for explosion risk areas (ATEX)


The label with the marking for explosion risk areas is located on the outside of the housing.


	~
Device without switching contacts:  ###F5503####ATEX  CE Ex II 2G Ex h IIC T4 Gb II 2D Ex h IIIC T95°C Db Ta = -20°C to +60°C	Article-no.  Measuring range p stat. max. Prodno.  Made in Germany   Ashcroft Instruments GmbH D · 52499 Baesweiler   Made in Germany    C
Device with integrated inductive proximity switch: ###F5503#### I####ATEX	
II 2G Ex h IIC T4 Gb II 2D Ex h IIIC T95°C Db Ta = -20°C to +60°C	Inductiv contact Zero position Contact function Measuring range p stat. max. Prodno.  Ashcroft Instruments GmbH D - 52499 Baesweiler  Made in Germany
PTB 99 ATEX 2219 X Supplement 4  Ex	Connect to certifiled intrinsically safe electric circuits only!  max. voltage: U = 16 V   12 D Ex h IIIC T4 Gb   11 2D Ex h IIIC T95°C Db   12 D Ex h IIIC T95°C Db   12 D Ex h IIIC T95°C Db   13 D Ex h IIIC T95°C Db   14 D Ex h IIIC T95°C Db   15 D Ex
(Ex) II 1D Ex ia IIIC T135°C Da	Integrated inductive switches SJ 2-N  Signature   Signature   Signature   Ashcroft
Device without switching contacts:	
###F5503-HP####ATEX  II 2G Ex h IIC T4 Gb II 2D Ex h IIIC T95°C Db Ta = -20°C to +60°C	Article-no
	T medium in the device max. 85°C
Device with integrated inductive proximity switch:	
###F5503-HP#### I####ATEX	Inductiv contact Article-no
II 2G Ex h IIC T4 Gb II 2D Ex h IIIC T95°C Db Ta = -20°C to +60°C	Contact function ASNC FOTT Measuring range Instruments p stat. max. GmbH Prodno. D - 52499 Baesweiler  Made in Germany









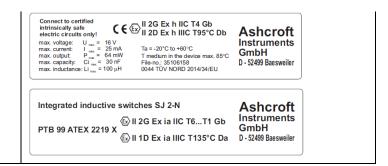

## 6 Construction and function


#### 6.1 Overview

1. Connecting rod 2. O-Ring, differential overpressure protection

Sensing diaphragmMovement

5. Lever 6. Link

7. Pressure transfer liquid

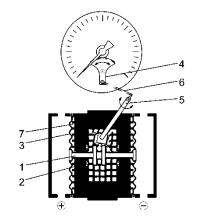

## 6.2 Description of function

The pressures to be compared act on flexible stainless steel diaphragms on either side of the sensing capsule. The two diaphragms are mechanically linked by a rigid connecting rod. To compensate high static pressures, the cavity between the two diaphragms is filled with hydraulic fluid. When pressures are equal on both diaphragms, they are at zero position. When there is a difference in pressures acting on the two diaphragms, they are deflected away from the high pressure side, towards the lower pressure side, causing a displacement of the connecting rod.

A precision mechanism translates the linear displacement of the diaphragm connecting rod to angular movement of the gauge's dial pointer. The pointer's displacement range of 270° corresponds to the full scale differential pressure. The connecting rod has intermediate flanges on either side, which protects the diaphragms against excess differential pressure.

When differential pressure exceeds the specified limit, the flange towards the lower pressure side is pressed against the sealing O-ring on the inside of the sensing capsule. This action isolates the fluid adjacent to the diaphragm exposed to lower pressure, from the fluid at higher pressure on the other side. This limits the pressure differential across the lower pressure diaphragm, and equalizes the pressure across the higher pressure diaphragm. Thus both diaphragms are protected against excess deflection and risks of rupturing. The model F5503-HP is designed for higher static pressure than the F5503 with stronger pressure chambers and mounting parts.

#### 6.1 Description of components

#### 6.1.1 Scale with pointer

The differential pressure gauge is equipped with a dial face and pointer pursuant to DIN 16003, nominal size 100 mm or 160 mm.

#### 6.1.2 Instrument connection

The instrument connection is located on the underside of the differential pressure gauge and can be a threaded or flanged similar to DIN EN 61518.

#### 6.1.3 Vent and flushing connection

The vent and flushing connection of each pressure chamber is located on its top side. It is closed by a screwed in G 1/8 plug.

#### 6.2 Accessories

Please contact the manufacturer regarding special tools and accessories.

#### ASHCROFT®

## 7 Transport

#### 7.1 Safety

The differential pressure gauge should be protected against the effects of knocks and impacts. The device should only be transported in the packaging provided, to protect against glass breakage. The device should only be transported in a clean condition (free of residues of measuring media).

#### 7.2 Transport inspection

The delivery must be checked for completeness and damage during transport. In the event of damage during transport, the delivery must not be accepted, or only accepted subject to reservation of the scope of the damage being recorded and, if necessary, a complaint initiated.

#### 7.3 Storage

The differential pressure gauge must be stored in dry, clean conditions, within a temperature range of -40 to +70 °C, protected against direct exposure to sunlight and protected against impact damage.

## 8 Assembly/Installation

#### 8.1 Safety

To ensure safe working during installation and servicing, suitable shut-off valves must be installed in the plant (see 6.2 Accessories), enabling the device:

- To be depressurized or taken out of operation;
- To be disconnected from the mains supply for repair or checks within the relevant plant;
- Or to enable function tests of the device to be performed "on site".

During the works to mount/install the gauge, the plant must be protected against being switched back on.

#### 8.2 Preparations (requirements for the installation location)

- A check on suitability of the device for the medium to be measured, the scope of the measurement range and of the protection against special conditions such as vibrations, pulsations and pressure spikes.
- A bracket must be installed to support the pressure gauge if the metering pipe is not able to provide adequate support.
- The installation location should be chosen such that the work-spaces for operating personnel are not located to the rear of the pressure gauge.

## 8.3 Mounting/Installation

#### 8.3.1 Process connection

The instrument is intended and factory adjusted for vertical mounting, pressure ports downward. When mounted in other orientation (max. ± 10°) the pointers' zero position needs to be adjusted (see 8.4.1 Zero point adjustment).

- Connection to be undertaken by authorized and qualified specialist staff only.
- Use only with the mechanical process connection provided regarding the configuration, see order code on the device type label, with a matching threaded seal.
- When connecting the device, the pipes must be depressurized.
- The pressure metering pipe must be laid inclined in such a way that, for example, for measurements of fluids no air pockets can form, and for measurements of gases no water pockets. If the necessary incline is not achieved, then at suitable points water separators or air separators must be installed.
- The pressure metering pipe must be kept as short as possible and laid without sharp bends, to avoid the occurrence of irritating delays.
- The instruments pressure ports are marked by "+" and "-" symbols:
  - "+" port must be connected to the higher pressure
  - "-" port must be connected to the lower pressure.
- With liquid measurement media, the pressurized connection pipe must be degassed, since any gas bubble inclusions result in measurement error.



If water is used as the measurement medium, the device must be frost-protected.




Safety notice: Only mount using the correct open-jawed wrench, and do not twist the device itself.

#### 8.3.2 Electrical connection




Take note of the electrical data in the EU design type test certification and the locally-applicable regulations and guidelines for installing and operating electrical plant in explosion risk areas (e.g. EN 60079-14, EN 60079-17 etc.).

- Connection to be undertaken by authorized and qualified specialist staff only.
- The electrical connection of the device is to be undertaken in accordance with the relevant regulations of the VDE and the regulations supplied by the local utilities company.
- Disconnect the plant from the mains supply before wiring electrical connections.
- Install appropriate fuses upstream.
- Differential pressure gauges with ATEX approval are equipped with a grounding screw, the grounding must be proper connected.



Please refer to type label for configuration of connections.

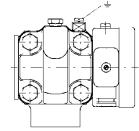

Grounding connector for singlewire conductor 4 ... 6 mm<sup>2</sup>

## 8.4 Starting up

The precondition for start-up is proper installation of all electrical feed lines and metering pipes. All connecting lines must be laid such that no mechanical forces can act on the device.

Before start-up, the seal on the pressurized connection line must be checked.


#### 8.4.1 Zero point adjustment


The differential pressure gauge is factory adjusted therefore in normal case adjustment during installation is not necessary. On this devices zero point adjustment on site is possible. For this, proceed as follows:

- Equalize pressure in both chambers.
- Disassemble screw plug.
- Use zero point adjustment screw to set the pointer to zero.
- Mount screw plug



Filled Models need to be vented before commissioning by opening the air valve on the upper side of instrument!





#### ASHCROFT®


#### 8.4.2 Setting the switch point

An adjustable lock is fitted in the front panel of the pressure gauge. Using the removable adjustment key, the contacts mounted on the target value indicators can be set to any point on the range covered by the scale.

For reasons relating to accuracy of switching and the lifetime of mechanical measurement systems, the switch points should be positioned between 10% and 90% of the range.

- Place the adjustment key on the axle of the adjustable lock.
- Press the axle inwards, until the carrier arm grips behind the adjuster pin on the target value indicator.
- By turning the key, adjust the target value indicator to the desired switch point.

Release the pressure on the axle, and remove the adjustment key.

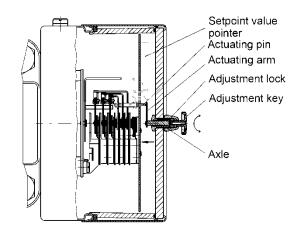

#### 8.4.3 Contact function

Function 1: Close contacts with the indication rising in a clockwise direction.

Function 2: Open contacts with the indication rising in a clockwise direction.

Contact assignment:

1st contact left target value indicator,

2nd contact middle target value indicator,

3rd contact right target value indicator

#### 8.5 Subsequent relocation of the gauge (by the customer)



**Recommendation:** Do not remove the differential pressure gauge from one metering point and fit it in a different place, as there is a risk of the measuring media being mixed, with unforeseeable chemical reactions.

## 9 Servicing

The device is maintenance-free. However, to ensure reliable operation and a long lifetime for the device, we recommend that it is checked regularly.

#### 9.1 Safety

When undertaking servicing work on the device, the pressure lines must be depressurized, the electrical connections isolated from the mains supply, and the plant secured against being switched on again.

#### 9.2 Check on function, and recalibration

The check on function and recalibration is carried out at regular intervals, depending on the application. The precise testing cycles should be adjusted in line with the operating conditions and ambient conditions. In the event of various device components interacting, the operating instructions for all other devices should also be taken into account.

- Check on display.
- Check on function, in conjunction with downstream components.
- Check of pressurized connection pipes for seal condition.
- Check of electrical connections.

#### 9.3 Cleaning and maintenance

Cleaning is carried out using a non-aggressive cleaning agent, with the ventilation valve closed and respecting the protection category of the device.

#### 10 Faults

### 10.1 Safety

Defective or faulty pressure gauges put the operational safety and process safety of the plant at risk, and can lead to a risk or injury to persons, the environment or the plant.

#### 10.2 Conduct in the event of faults

All defective of faulty devices must be taken out of service. If a repair is required, the device must be sent directly to our Repairs Department. We request that all returns of devices are agreed with our Service Department.

#### 10.3 Fault table

Possible situations indicating a fault:

- Jerky or random movement of the pointer
- Pointer does not set to zero for pressure less display
- Bent or loose pointer
- Cracked window
- Leaks when the device is filled
- Damage to housing
- Indications that the measurement system seal is imperfect (discoloration to dial display or of filling liquid)

In these instances, replacement of the pressure gauge is always required.

#### 10.4 Conduct following fault rectification

See Chapter 8.3 Mounting/Installation

## 11 Removal, disposal

### 11.1 Safety



Residues of measuring media in and on removed gauges can constitute a risk to people, the environment and equipment. Adequate precautionary measures must be adopted. If necessary, the devices must be cleaned thoroughly (see advice in safety data sheets).

#### 11.2 Removal

- When undertaking servicing work on the device, the pressure lines must be depressurized, the electrical connections isolated from the mains supply, and the plant secured against being switched on again.
- Demount the gauge using a suitable tool

#### 11.3 Disposal



Please help to protect the environment and dispose of or recycle the devices and components used in accordance with the applicable regulations.

## 12 Appendix

#### 12.1 Declaration of conformity model F5503 and F5503-HP



#### EU-Konformitätserklärung EU-Declaration of Conformity DIN EN ISO IEC 17050-1:2010



#### Ashcroft Instruments GmbH

Max-Planck-Straße 1 52499 Baesweiler

erklärt in alleiniger Verantwortung, dass die mit CE gekennzeichneten Produkte declares in sole responsibility that the products marked with CE

Gerät: Equipment: Differenzdruckmanometer vom Typ F5503 / F5503-HP

Differential Pressure Gauge Type F5503 / F5503-HP

Kennzeichnung: Marking:

(Ex) || 2G Ex h || C T4 Gb || 2D Ex h || C T95°C Db || Ta = -20°C to +60°C

Herstellungsdatum: Date of manufacture: ab 04.11.2019 from 04.11.2019

die grundlegenden Sicherheits- und Schutzanforderungen erfüllen, in Übereinstimmung mit den unten genannten Richtlinien und Normen. Die Konformitätsaussage bezieht sich auf die Konzeption und Fertigung der oben genannten Produkte.

the fundamental safety and protection requirements passed in accordance with the guidelines and standards listed below. This declaration of conformity refers to the design and manufacture of the above products.

Richtlinie Directive	2014/34/EU "Geräte und Schutzsysteme zur bestimmungs- gemäßen Verwendung in explosionsgefährdeten Bereichen" "equipment and protective systems intended for use in potentially explosive atmospheres"									
Angewendete harmonisierte Normen Used harmonized Standards	EN 60079-0:2014, EN 60079-31:2014, EN ISO 80079-36:2016, EN ISO 80079-37:2016									
Benannte Stelle Notification Body	Code number of notified Body: 0044 TÜV NORD CERT Langemarkstrasse 20, 45141 Essen, Germany									
Hinterlegungsnummer: Dossier File No.:	35106158									
Richtlinie Directive	(1)2014/68/EU "Druckgeräterichtlinie" "Pressure Equipment Directive"									
Angewendete Prüfnormen: Used test standards:	EN 837-1,2,3:1996, DIN 16003:2018									
(1) PS >200 bar und V <0,1I, Ar PS >200 bar and V <0,1I, Article 4 Pres	tikel 4 Drucktragende Ausrüstungsteile, Modul A									
Richtlinie Directive	1907/2006 "Verordnungen zur Registrierung, Bewertung, Zulassung und Beschränkung chemischer Stoffe (REACH) "Regulations on the Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH)"									
Besonders besorgniserregende Stoffe Substances of Very High Concern	SVHC-Liste der Europäischen Chemikalienagentur ECHA SVHC List of the European Chemicals Agency ECHA http://echa.europa.eu/candidate-list-table									
Ashcroft Instruments GmbH For	: +49 (0)2401-808-888 eMail: customer.service@ashcroft.com www.ashcroft.ee									

NHEISE'

SASHCROFT '





## EU-Konformitätserklärung

EU-Declaration of Conformity DIN EN ISO IEC 17050-1:2010



Keines unserer Produkte wird mit Chemikalien hergestellt, die als besonders besorgniserregend identifiziert wurden. None of our products are produced with chemicals identified as Substance of very high concern identification. 2011/65/EU "Richtlinie zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten" Richtlinie "Directive on the restriction of the use of certain hazardous substances in electrical and Directive electronic equipment' 2015/863/EU "Änderung von Anhang II der Richtlinie 2011/65/EU" "Amending Annex II to Directive 2011/65/EU" Einstufung der Produkte nach Anhang II Punkt 9 der Richtlinie "Überwachungs- und Kontrollinstrumente einschließlich Einstufung Überwachungs- und Kontrollinstrumente in der Industrie\* Classification Classification of the products according to Annex II, point 9 of the Directive "Monitoring and control instruments, including industrial monitoring and control instruments Beschränkungen und Höchstkonzentrationen in homogenen Werkstoffen in Gewichtsprozent: Limitations and maximum concentrations in homogeneous materials in percent by weight: Blei (0,1 %) Lead (0.1 %) Quecksilber (0,1 %) Mercury (0,1 %) Cadmium (0,01 %) Cadmium (0,01 %) Sechswertiges Chrom (0,1 %) Stoffbeschränkungen Hexavalent chromium (0,1 %) Substance restrictions Polybromierte Biphenyle (PBB) (0,1 %) Polybrominated biphenyls (PBB) (0,1 %) Polybromierte Diphenylether (PBDE) (0,1 %) Polybrominated diphenyl ethers (PBDE) (0,1 %) Di(2-ethylhexyl)phthalat (DEHP) (0,1 %) Bis(2-ethylhexyl) phthalate (DEHP) (0,1 %) Butylbenzylphthalat (BBP) (0,1 %) Butyl benzyl phthalate (BBP) (0,1 %) Dibutylphthalat (DBP) (0,1 %) Dibutyl phthalate (DBP) (0,1 %, Diisobutylphthalat (DIBP) (0,1 %)

Die oben benannten Produkte erfüllen die derzeit gültigen Vorschriften der Richtlinie 2011/65/EU des Europäischen Parlaments und des Rates vom 8. Juni 2011 sowie der Delegierten Richtlinie 2015/863/EU der Kommission vom 31.03.2015.

Diisobutyl phthalate (DIBP) (0,1 %)

The above-mentioned products comply with the currently valid provisions of Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 and the Commission Delegate Directive 2015/863/EU of 31 March 2015.

Baesweiler, den 10.02.2020

Ort und Datum Place and date Werksleiter Operations Manager

Ashcroft Instruments GmbH

Fon: +49 (0)2401-808-888

eMail: customer.service@ashcroft.com

www.ashcroft.eu

SASHCROFT '

■ HEISE

#### 12.2 Declaration of conformity model F5503 and F5503-HP with contacts



## EU-Konformitätserklärung EU-Declaration of Conformity DIN EN ISO IEC 17050-1:2010



#### Ashcroft Instruments GmbH

Max-Planck-Straße 1 52499 Baesweiler

erklärt in alleiniger Verantwortung, dass die mit CE gekennzeichneten Produkte declares in sole responsibility that the products marked with CE

Gerät:

Differenzdruckmanometer vom Typ F5503 / F5503-HP mit induktivem

Näherungsschalter

Equipment:

Differential Pressure Gauge Type F5503 / F5503-HP with inductive proximity

switch

Kennzeichnung:

Marking:

[ 2G Ex h IIC T4 Gb II 2D Ex h IIIC T95°C Db Ta = -20°C to +60°C

Herstellungsdatum: Date of manufacture:

Ashcroft Instruments GmbH

ab 04.11.2019 from 04.11.2019

die grundlegenden Sicherheits- und Schutzanforderungen erfüllen, in Übereinstimmung mit den unten genannten Richtlinien und Normen. Die Konformitätsaussage bezieht sich auf die Konzeption und Fertigung der oben genannten Produkte.

the fundamental safety and protection requirements passed in accordance with the guidelines and standards listed below. This declaration of conformity refers to the design and manufacture of the above products.

Richtlinie Directive	2014/34/EU "Geräte und Schutzsysteme zur bestimmungs- gemäßen Verwendung in explosionsgefährdeten Bereichen" "equipment and protective systems intended for use in potentially explosive atmospheres"							
Angewendete harmonisierte Normen Used harmonized Standards	EN 60079-0:2014, EN 60079-31:2014, EN ISO 80079-36:2016, EN ISO 80079-37:2016							
Benannte Stelle Notification Body	Code number of notified Body: 0044 TÜV NORD CERT Langemarkstrasse 20, 45141 Essen, Germany							
Hinterlegungsnummer: Dossler File No.:	35106158	•						
EG- Baumusterprüfbescheinigung EC-Type-Certified	Induktive Näherungsschalter inductive proximity switch	PTB 99 ATEX 2219X						
Richtlinie Directive	(1)2014/68/EU "Druckgeräterichtlir "Pressure Equipment Dire							
Angewendete Prüfnormen: Used test standards:	EN 837-1,2,3:1996, DIN 16003:2018							
(1) PS >200 bar und V <0,1I, Artikel 4 Drucktragende Ausrüstungsteile, Modul A PS >200 bar and V <0,1I, Article 4 Pressure Accessories, Module A								

SASHCROFT \*


Fon: +49 (0)2401-808-888

NHEISE

eMail: customer.service@ashcroft.com

www.ashcroft.eu



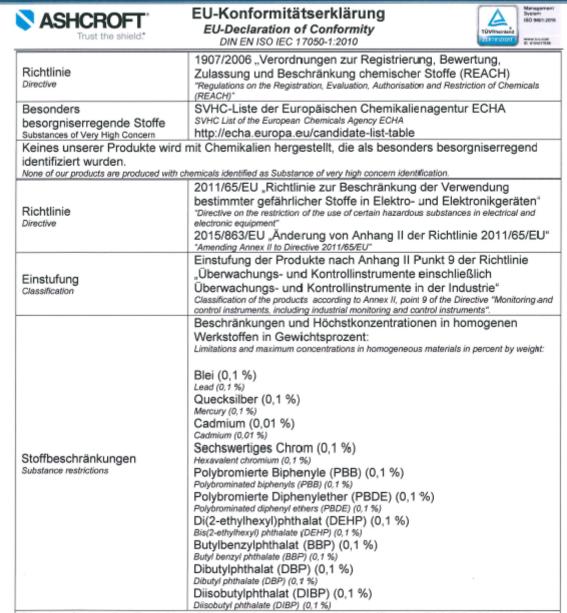

Die oben benannten Produkte erfüllen die derzeit gültigen Vorschriften der Richtlinie 2011/65/EU des Europäischen Parlaments und des Rates vom 8. Juni 2011 sowie der Delegierten Richtlinie 2015/863/EU der Kommission vom 31.03.2015.

The above-mentioned products comply with the currently valid provisions of Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 and the Commission Delegate Directive 2015/863/EU of 31 March 2015.

Baesweiler, den 10.02.2020

Ort und Datum Place and date Werksleiter Operations Manager

Ashcroft Instruments GmbH Fon: +49 (0)2401-808-888

eMail: customer.service@ashcroft.com

www.ashcroft.eu

SASHCROFT "

NHEISE'

#### 12.3 EU design type test certification for inductive proximity switches of types SJ2-N

## Physikalisch-Technische Bundesanstalt



Braunschweig und Berlin



## (1) EC-TYPE-EXAMINATION CERTIFICATE

(Translation)

- (2) Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres - Directive 94/9/EC
- (3) EC-type-examination Certificate Number:



#### PTB 99 ATEX 2219 X

(4) Equipment: Slot-type initiators types SJ... and SC...

(5) Manufacturer: Pepperl + Fuchs GmbH

(6) Address: D-68307 Mannheim

- (7) This equipment and any acceptable variation thereto are specified in the schedule to this certificate and the documents therein referred to.
- (8) The Physikalisch-Technische Bundesanstalt, notified body No. 0102 in accordance with Article 9 of the Council Directive 94/9/EC of 23 March 1994, certifies that this equipment has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres, given in Annex II to the Directive.

The examination and test results are recorded in the confidential report PTB Ex 99-29175.

(9) Compliance with the Essential Health and Safety Requirements has been assured by compliance with:

EN 50014:1997

EN 50020:1994

- (10) If the sign "X" is placed after the certificate number, it indicates that the equipment is subject to special conditions for safe use specified in the schedule to this certificate.
- (11) This EC-type-examination Certificate relates only to the design and construction of the specified equipment in accordance with Directive 94/9/EC. Further requirements of this Directive apply to the manufacture and supply of this equipment.
- (12) The marking of the equipment shall include the following:

II 2 G EEx ia IIC T6

Zertifizierungsstelle Explosionsschutz By order: Braunschweig, December 22, 1999

Dr.-Ing. U. Johannsmeyer

Regierungsdirektor

sheet 1/3

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.



Braunschweig und Berlin

## (13) SCHEDULE

#### (14) EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

#### (15) Description of equipment

The slot-type initiators of types SJ... and SC... are used to convert displacements into electrical signals.

The slot-type initiators may be operated with intrinsically safe circuits certified for categories and explosion groups [EEx ia] IIC or IIB resp. [EEx ib] IIC or IIB. The category as well as the explosion group of the intrinsically safe slot-type initiators depends on the connected supplying intrinsically safe circuit.

#### Electrical data

Evaluation and		
supply circuit	type of protection Intrinsic Safety	EEx ia IIC/IIB
	resp.	EEx ib IIC/IIB
	only for connection to certified intr	insically safe circuits
	Maximum values:	

type 1	type 2	type 3	type 4
U <sub>i</sub> = 16 V	U <sub>i</sub> = 16 V	U <sub>i</sub> = 16 V	U <sub>i</sub> = 16 V
I <sub>i</sub> = 25 mA	$I_i = 25 \text{ mA}$	$l_i = 52 \text{ mA}$	I <sub>i</sub> = 76 mA
$P_i = 34 \text{ mW}$	P <sub>i</sub> = 64 mW	P <sub>i</sub> = 169 mW	P <sub>i</sub> = 242 mW

The assignment of the type of the connected circuit to the maximum permissible ambient temperature and the temperature class as well as the effective internal reactances for the individual types of slot-type intiators are shown in the table:

sheet 2/3





#### Braunschweig und Berlin

#### SCHEDULE TO EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

			type 1		type 2			type 3			type 4			
types	Ci	$\hat{\mathbf{L}}_{i}$	m	maximum permissible ambient temperature in °C for application in temperature class										
	[nF]	[µH]	T6	T5	T4-	T6	T5	T4-	T6	T5	T4-	Т6	T5	T4-
SC2-N0	150	150	72	87	T1	65	80	T1 100	40	55	T1 75	23	38	T1 54
SC3,5-N0-Y	150	150	72	87	100	65	80	100	40	55	75	23	38	54
SC3,5N0	150	150	73	88	100	66	81	100	45	60	89	30	45	74
SJ1,8-N-Y	30	100	73	88	100	67	82	100	45	60	78	30	45	57
SJ2,2-N	30	100	73	88	100	67	82	100	45	60	78	30	45	57
SJ2-N	30	100	73	88	100	67	82	100	45	60	78	30	45	57
SJ3,5N	50	250	73	88	100	66	81	100	45	60	89	30	45	74
SJ3,5-H	50	250	73	88	100	66	81	100	45	60	89	30	45	74
SJ5N	50	250	73	88	100	66	81	100	45	60	89	30	45	74
SJ5-K	50	550	72	87	100	66	81	100	42	57	82	26	41	63
SJ10-N	50	1000	72	87	100	66	81	100	42	57	82	26	41	63
SJ15-N	150	1200	72	87	100	66	81	100	42	57	82	26	41	63
SJ30-N	150	1250	72	87	100	66	81	100	42	57	82	26	41	63

#### (16) Test report PTB Ex 99-29175

#### (17) Special conditions for safe use

- For the application within a temperature range of -60°C to -20 °C the slot-type initiators of types SJ... and SC... must be protected against damage due to impact by mounting into an additional housing.
- The connection facilities of the slot-type initiators of types SJ... and SC... shall be installed as such that at least a degree of protection of IP20 according to IEC-publication 60529:1989 is met.
- The assignment of the type of the connected circuit to the maximum permissible ambient temperature and the temperature class as well as the effective internal reactances for the individual types of slot-type initiators is shown in the table given under item (15) of this ECtype-examination certificate..
- Inadmissible electrostatic charge of the plastic housing of the slot-type initiators of type SJ30-N..., has to be avoided (warning label on the device).

#### (18) Essential health and safety requirements

Met by the standards mentioned above

Zertifizierungsstelle Explosionsschutz

By order:

Braunschweig, August 10, 1999

Ör.-Ing. Ŭ. Johannsme Regierungsdirektor

sheet 3/3

EC-type-examination Certificates without admixer and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.



Braunschweig und Berlin

#### SUPPLEMENT

according to Directive 94/9/EC Annex III.6

## to EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

(Translation)

Equipment: Slot-type initiators, types SJ... and SC...

Marking: (Ex) II 2 G EEx ia IIC T6

Manufacturer: Pepperl + Fuchs GmbH

Address: Königsberger Allee 87, 68307 Mannheim, Germany

#### Description of supplements and modifications

The slot-type initiators of type series SJ... and SC... listed below may in future also be used in hazardous areas where equipment of catagory-1 is required.

The modifications exclusively concern the "Electrical data" (change of maximum permissible ambient temperatures for application as category-1 equipment, reduction of the intrinsically safe evaluation and supply circuit to category ia) as well as the marking of the slot-type initiators listed below.

 SC2-N0...
 SJ5-...-N...

 SC3,5-N0-Y...
 SJ5-K...

 SC3,5...-N0...
 SJ10-N...

 SJ2-N...
 SJ15-N...

 SJ3,5-...-N...
 SJ30-N...

For application as category-1 equipment the marking of the slot-type initiators listed above will be in the future:

#### II 1 G EEx ia IIC T6

The "Special conditions" are also valid for application as category-1 equipment without changes,

Sheet 1/2

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.



Braunschweig und Berlin

#### 1. SUPPLEMENT TO EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

#### Electrical data

Evaluation and supply circuit type of protection Intrinsic Safety EEx ia IIC/IIB only for connection to certified intrinsically safe circuits Maximum values:

type 1	type 2	type 3	type 4
U <sub>i</sub> = 16 V			
I <sub>i</sub> = 25 mA	I <sub>i</sub> = 25 mA	I <sub>i</sub> = 52 mA	I <sub>i</sub> = 76 mA
P <sub>i</sub> = 34 mW	P <sub>i</sub> = 64 mW	$P_i = 169 \text{ mW}$	P <sub>i</sub> = 242 mW

The assignment of the type of the connected circuit to the maximum permissible ambient temperature and the temperature class as well as the effective internal reactances for the individual types of slot-type intiators are shown in the following table:

				type 1		type 2			type 3			type 4		
types	Ci	Li	m	maximum permissible ambient temperature in °C for application in temperature class										
	[nF]	[µH]	Т6	T5	T4- T1	Т6	T5	T4- T1	Т6	T5	T4- T1	Т6	T5	T4- T1
SC2-N0	150	150	55	67	95	48	60	88	23	35	63	6	18	46
SC3,5-N0-Y	150	150	55	67	95	48	60	88	23	35	63	6	18	46
SC3,5N0	150	150	56	68	96	49	61	89	28	40	68	13	25	53
SJ2-N	30	100	56	68	96	49	61	89	28	40	68	13	25	53
SJ3,5N	50	250	56	68	96	49	61	89	28	40	68	13	25	53
SJ5N	50	250	56	68	96	49	61	89	28	40	68	13	25	53
SJ5-K	50	550	55	67	95	48	60	88	25	37	65	9	21	49
SJ10-N	50	1000	55	67	95	48	60	88	25	37	65	9	21	49
SJ15-N	150	1200	55	67	95	48	60	88	25	37	65	9	21	49
SJ30-N	150	1250	55	67	95	48	60	88	25	37	65	9	21	49

Test report: PTB Ex 03-23133

Zertifizierungsstelle Explosionsschutz

By order:

Dr.-Ing. U. Johannsmeyer

Regierungsdirektor

Braunschweig, October 29, 2003

Sheet 2/2

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt.

In case of dispute, the German text shall prevail.



Braunschweig und Berlin

#### 2. SUPPLEMENT

according to Directive 94/9/EC Annex III.6

#### to EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

(Translation)

Equipment:

Slot-type initiators, types SJ... and SC...

Marking:

Manufacturer: Pepperl + Fuchs GmbH

II 1 G EEx ia IIC T6

Address:

Lilienthalstraße 200, 68307 Mannheim, Germany

#### Description of supplements and modifications

In the future the slot-type initiators, types SJ... and SC... may also be manufactured and operated according to the test documents listed in the assessment and test report.

The modifications concern the application of alternative casting compounds and materials for the type label as well as a different enclosure material and additional types of LEDs. The manufacturer's address changes as given above. Furthermore, the test specification is adapted to the current state of the standards which causes an alteration of the marking.

The marking will read in future:

The "Special Conditions" and all further specifications of the EC-type examination certificate including the 1st supplement apply without changes also to this 2nd supplement.

Applied standards

EN 60079-0:2006

EN 60079-11:2007

EN 60079-26:2007

Assessment and test report:

PTB Ex 11-20276

Zertifizierungssektor Explosionsschutz On behalf of PTB:

Braunschweig, November 25, 2011

Dr.-Ing. U. Johan Direktor und Profes

Sheet 1/1

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.





#### 3. SUPPLEMENT

according to Directive 94/9/EC Annex III.6

## to EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

(Translation)

Equipment: Slot-type inductive initiators, types SJ... and SC...

Marking: (Ex) II 1 G Ex ia IIC T6 or II 2 G Ex ia IIC T6

Manufacturer: Pepperl+Fuchs GmbH

Address: Lilienthalstraße 200, 68307 Mannheim, Germany

#### Description of supplements and modifications

The modifications concern the consideration of the current state of the applied standards and – resulting from this – the marking of the slot-type inductive initiators of types SJ... and SC... as well as the internal construction (inclusion of further alternative casting resin materials).

The "electrical data", the "special conditions" as well as all other specifications apply without changes.

In the future the marking will read:

🖾 II1G ExiallCT6...T1Ga or II2G ExiallCT6...T1Gb

#### Applied standards

EN 60079-0:2012, EN 60079-11:2012, EN 60079-26:2007

Test report: PTB Ex 15-24247

Konformitätsbewertungsstelle, Sektor Explosionsschutz

Braunschweig, April 15, 2015

On behalf of PTB:

Dr.-Ing. U. Johannsmeye Direktor und Professor

Sheet 1/1

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt.

In case of dispute, the German text shall prevail.





#### 4. SUPPLEMENT

according to Directive 94/9/EC Annex III.6

## to EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

(Translation)

Slot-type initiators, types SL... and SC...

Marking:

🖾 II 1 G Exia IIC T6... T1 Ga or II 2 G Exia IIC T6... T1 Gb

Manufacturer: Pepperl+Fuchs GmbH

Address:

Lilienthalstraße 200, 68307 Mannheim, Germany

#### Description of supplements and modifications

The modifications concern the application of the new state of the standard EN 60079-0, the internal design as well as the extension of the EC-type examination certificate by type of protection Ex ia IIIC for the slot-type initiators of types SL... and SC... .

Resulting from this - the marking, the "Electrical Data" as well as the "Special Conditions" for the slot-type initiators of types SL... and SC... change.

In the future the marking will read:

😢 II 1 G Exia IIC T6... T1 Ga or II 2 G Exia IIC T6... T1 Gb

II 1 D Ex ia IIIC T135°C Da

Sheet 1/4

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt.

In case of dispute, the German text shall prevail.







#### 4. SUPPLEMENT TO EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

Electrical data

Evaluation and ......only for connection to certified intrinsically safe circuits supply circuit

Ex ia IIC/IIB for EPL Ga

Ex ia IIIC for EPL Da

Ex ia IIC/IIB or Ex ib IIC/IIB for EPL Gb or

Ex ia IIIC or Ex ib IIIC for EPL Db or

Maximum values:

type 1	type 2	type 3	type 4
U <sub>i</sub> = 16 V	U <sub>i</sub> = 16 V	U <sub>i</sub> = 16 V	U <sub>i</sub> = 16 V
I <sub>i</sub> = 25 mA	I <sub>i</sub> = 25 mA	I <sub>i</sub> = 52 mA	I <sub>i</sub> = 76 mA
P <sub>i</sub> = 34 mW	P <sub>i</sub> = 64 mW	P <sub>i</sub> = 169 mW	P <sub>i</sub> = 242 mW

Table 1

For relationship between type of connected circuit, maximum ambient temperature for the application as EPL-Ga equipment and temperature class as well as the effective internal reactances for the individual types of slot-type initiators, reference is made to the following Table 2:

	Type 1 Type 2 Type 3						Type 4							
Types	Ci	Li	М	Maximum permissible ambient temperature in °C for application in temperature class										
	[nF]	[µH]	Т6	T5	T4- T1	Т6	T5	T4- T1	Т6	T5	T4- T1	T6	T5	T4- T1
SC2-N0	150	150	55	67	95	48	60	88	23	35	63	6	18	46
SC3,5-N0-Y	150	150	55	67	95	48	60	88	23	35	63	6	18	46
SC3,5N0	150	150	56	68	96	49	61	89	28	40	68	13	25	53
SJ2-N	30	100	56	68	96	49	61	89	28	40	68	13	25	53
SJ3,5N	50	250	56	68	96	49	61	89	28	40	68	13	25	53
SJ5N	50	250	56	68	96	49	61	89	28	40	68	13	25	53
SJ5-K	50	550	55	67	95	48	60	88	25	37	65	9	21	49
SJ10-N	50	1000	55	67	95	48	60	88	25	37	65	9	21	49
SJ15-N	150	1200	55	67	95	48	60	88	25	37	65	9	21	49
SJ30-N	150	1250	55	67	95	48	60	88	25	37	65	9	21	49

Table 2

Sheet 2/4

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt.

In case of dispute, the German text shall prevail.





#### 4. SUPPLEMENT TO EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

For relationship between type of connected circuit, maximum ambient temperature for the application as EPL-Gb equipment and temperature class as well as the effective internal reactances for the individual types of slot-type initiators, reference is made to the following Table 3:

				Туре	1		Type 2	2		Туре	3		Туре 4	4
Types	Ci	Li	Maximum permissible ambient temperature in °C for application in temperature class											
	[nF]	[µH]	Т6	T5	T4- T1	T6	T5	T4- T1	Т6	T5	T4- T1	Т6	T5	T4- T1
SC2-N0	150	150	72	87	100	65	80	100	40	55	75	23	38	54
SC3,5-N0-Y	150	150	72	87	100	65	80	100	40	55	75	23	38	54
SC3,5N0	150	150	73	88	100	66	81	100	45	60	89	30	45	74
SJ1,8-N-Y	30	100	73	88	100	67	82	100	45	60	78	30	45	57
SJ2,2-N	30	100	73	88	100	67	82	100	45	60	78	30	45	57
SJ2-N	30	100	73	88	100	67	82	100	45	60	78	30	45	57
SJ3,5N	50	250	73	88	100	66	81	100	45	60	89	30	45	74
SJ3,5-H	50	250	73	88	100	66	81	100	45	60	89	30	45	74
SJ5N	50	250	73	88	100	66	81	100	45	60	89	30	45	74
SJ5-K	50	550	72	87	100	66	81	100	42	57	82	26	41	63
SJ10-N	50	1000	72	87	100	66	81	100	42	57	82	26	41	63
SJ15-N	150	1200	72	87	100	66	81	100	42	57	82	26	41	63
SJ30-N	150	1250	72	87	100	66	81	100	42	57	82	26	41	63

Table 3

For relationship between type of connected circuit, maximum ambient temperature for the application as EPL-Da or Db equipment as well as the effective internal reactances for the individual types of slot-type initiators, reference is made to the following Table 4:

			Type 1	Type 2	Type 3	Type 4		
Types	Ci	Li	Maximum permissible ambient temperature in °C					
	[nF]	[µH]						
SC2-N0	150	150	100	100	75	54		
SC3,5-N0-Y	150	150	100	100	75	54		
SC3,5N0	150	150	100	100	89	74		
SJ1,8-N-Y	30	100	100	100	78	57		
SJ2,2-N	30	100	100	100	78	57		
SJ2-N	30	100	100	100	78	57		
SJ3,5N	50	250	100	100	89	74		
SJ3,5-H	50	250	100	100	89	74		
SJ5N	50	250	100	100	89	74		
SJ5-K	50	550	100	100	82	63		
SJ10-N	50	1000	100	100	82	63		
SJ15-N	150	1200	100	100	82	63		
SJ30-N	150	1250	100	100	82	63		

Table 4

Sheet 3/4

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.





#### 4. SUPPLEMENT TO EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

#### Special conditions for safe use

- For the application within a temperature range of -60 °C to -20 °C the slot-type initiators, types SL... and SC... shall be protected against damage due to impact by mounting into an additional housing.
- The connection facilities of the slot-type initiators, types SL... and SC...shall be installed as such that a minimum degree of protection of IP2X in accordance with EN 60529 is met.
- 3. For relationship between type of the connected circuit, maximum permissible ambient temperature and temperature class as well as the effective internal reactances for the individual types of slot-type initiators, reference is made to tables 1, 2 and 3 given in this 4. supplement to EC-type-examination certificate PTB 99 ATEX 2219 X.
- 4. Inadmissible electrostatic charge of the plastic enclosures shall be avoided for the application of the following types of slot-type initiators according to the explosion groups and equipment categories specified in the following Table 5. When the respective types of slot-type initiators are applied in potentially explosive gas atmospheres a corresponding warning note shall be affixed on the slot-type initiators or near the slot-type initiators respectively. When these are applied in potentially explosive dust atmospheres the corresponding notes given in the operating instructions manual shall be considered.

Туре	Group II (1 G)	Group II (2 G)	Group III (1D or 2D)
SJ5-K	IIC	-	III
SJ10-N	IIC	-	III
SJ15-N	IIC	-	III
SJ30-N	IIA/IIB/IIC	IIC	III
SC3,5N0	-	-	III
SC3,5-N0-Y	-	-	III
SJ1,8-N-Y	-	-	III
SJ3,5N	-		=======================================
SJ5N	-	-	III

Table 5

Applied standards

EN 60079-0: 2012 + A11:2013, EN 60079-11:2012

Test report: PTB Ex 16-25161

Konformitätsbewertungsstelle, Sektor Explosionsschutz On behalt of PTB: Braunschweig, February 3, 2016

/ /(/

Dr.-Ing. U. Johannsm Direktor und Professo

Sheet 4/4

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt.

In case of dispute, the German text shall prevail.



## 12.4 Data sheet for differential pressure gauge F5503/F5503-HP

Detailed data sheet is available from supplier's website (see 1.6 Manufacturer's address, customer services)

This Table refers to specific documents:

Model	Description	Document
F5503	Stainless steel differential pressure gauge model F5503	G1.F5503
F5503-HP	Stainless steel differential pressure gauge for high static pressure model F5503-HP	G1.F5503-HP
K5500	Electrical contact devices for pressure and temperature gauges	G1.K5500